Service Document
Exchange Set

RRCD 3410

Service Manual

Sicherheit Safety

Materialnr./Part No. 720108000001

⚠ Es gelten die Vorschriften und Sicherheitshinweise gemäß dem Service Manual "Sicherheit", Materialnummer 720108000001, sowie zusätzlich die eventuell abweichenden, landesspezifischen Vorschriften!

⚠ The regulations and safety instructions shall be valid as provided by the "Safety" Service Manual, part number 720108000001, as well as the respective national deviations.

Dieses Service Dokument ist nur in Datenform verfügbar
This Service Document is only available as data

Änderungen vorbehalten/Subject to alteration

Made by GRUNDIG in Germany • H-S43 0105
http://www.grundig.com

GRUNDIG

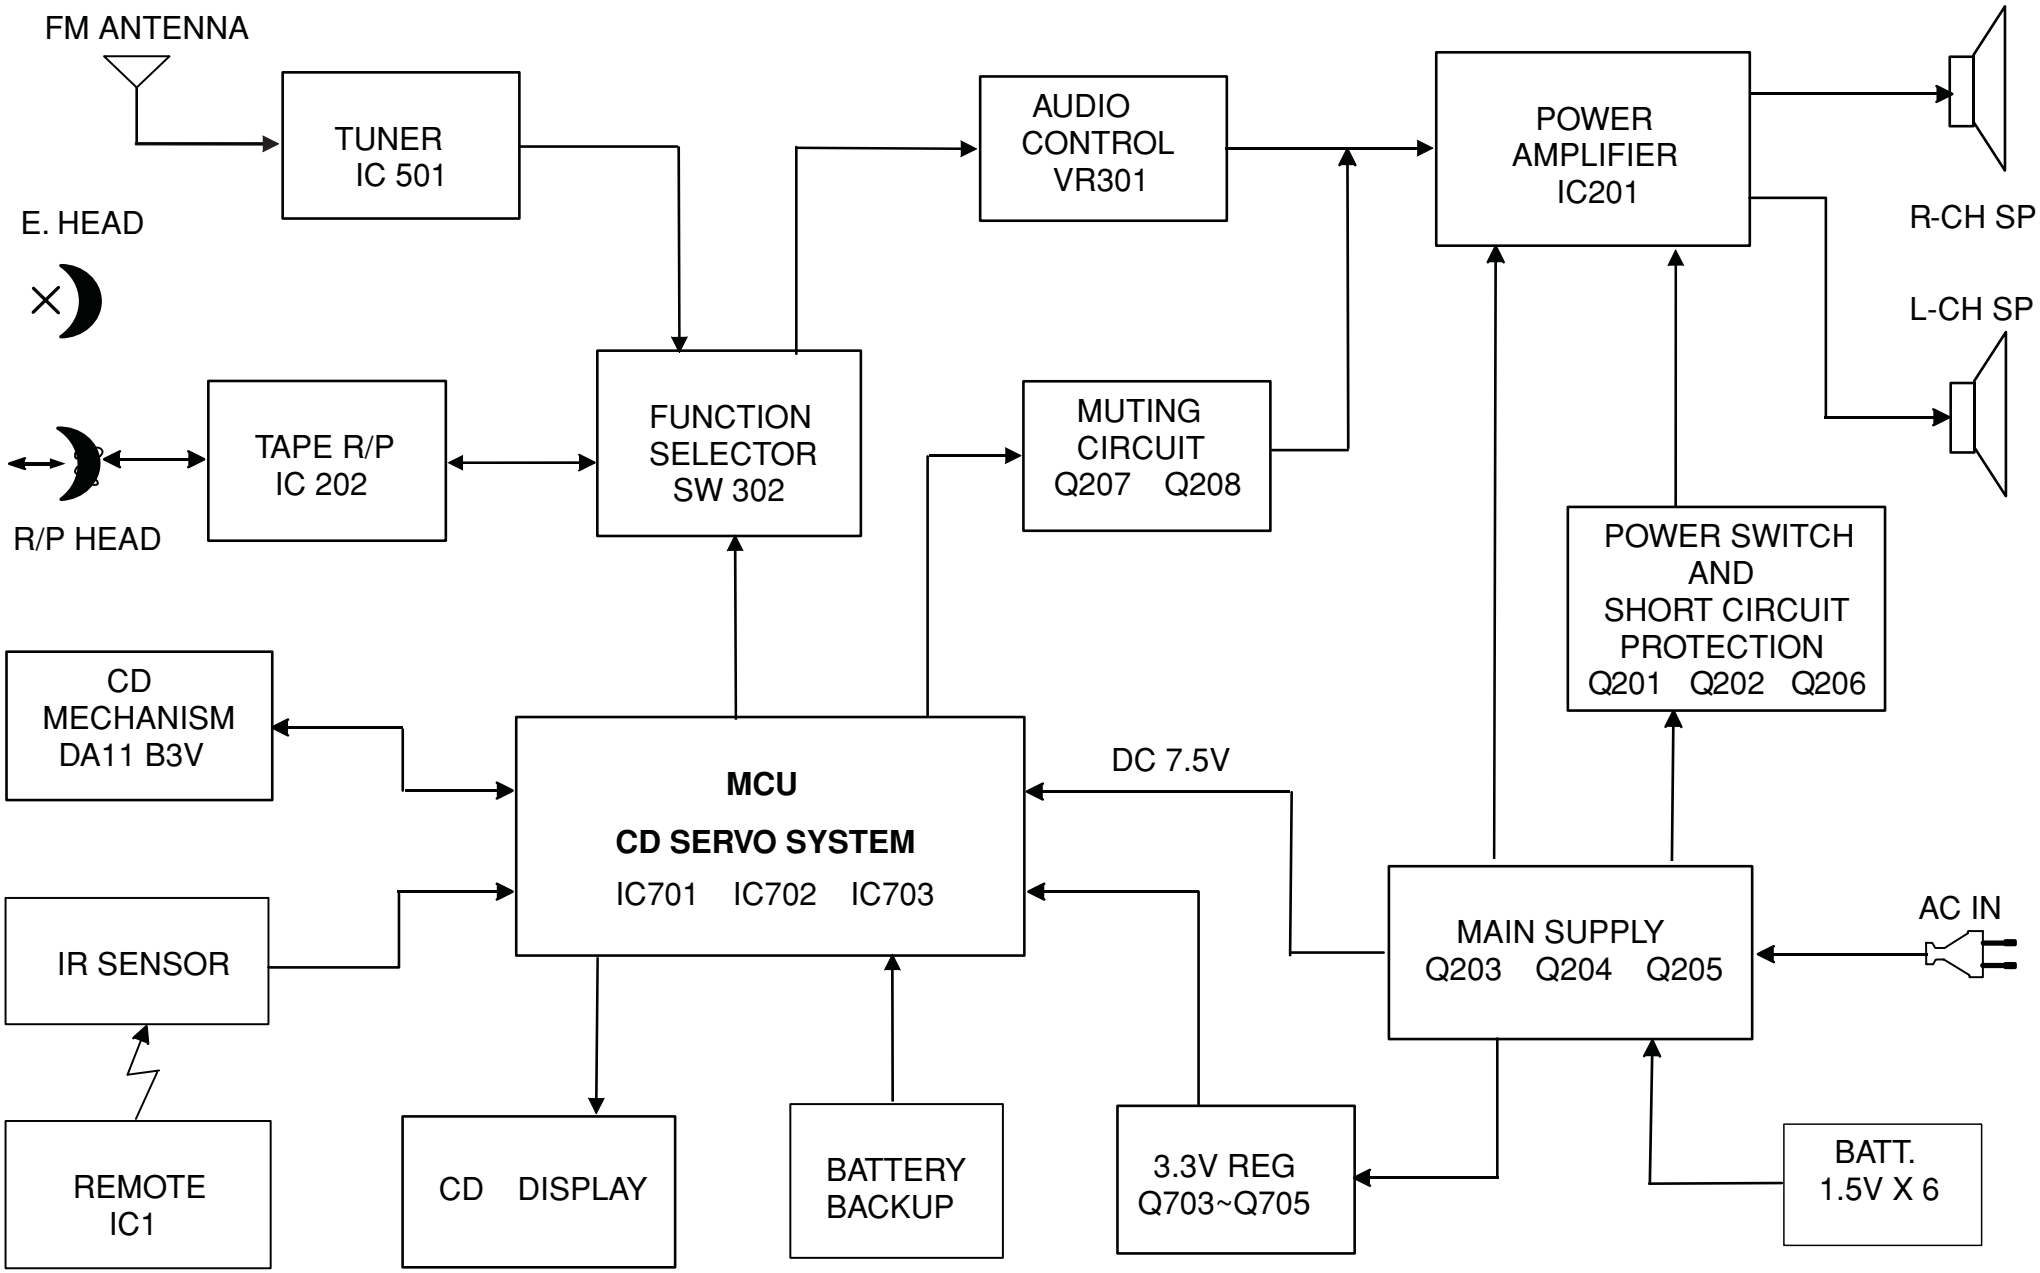
FM ANTENNA
TUNER
IC 501
AUDIO
CONTROL
VR301
POWER
AMPLIFIER
IC201
R-CH SP
L-CH SP
E. HEAD
TAPE R/P
IC 202
R/P HEAD
FUNCTION
SELECTOR
SW 302
MUTING
CIRCUIT
Q207 Q208
POWER SWITCH
AND
SHORT CIRCUIT
PROTECTION
Q201 Q202 Q206
CD
MECHANISM
DA11 B3V
MCU
CD SERVO SYSTEM
IC701 IC702 IC703
DC 7.5V
IR SENSOR
MAIN SUPPLY
Q203 Q204 Q205
AC IN
REMOTE
IC1
CD DISPLAY
BATTERY
BACKUP
3.3V REG
Q703~Q705
BATT.
1.5V X 6

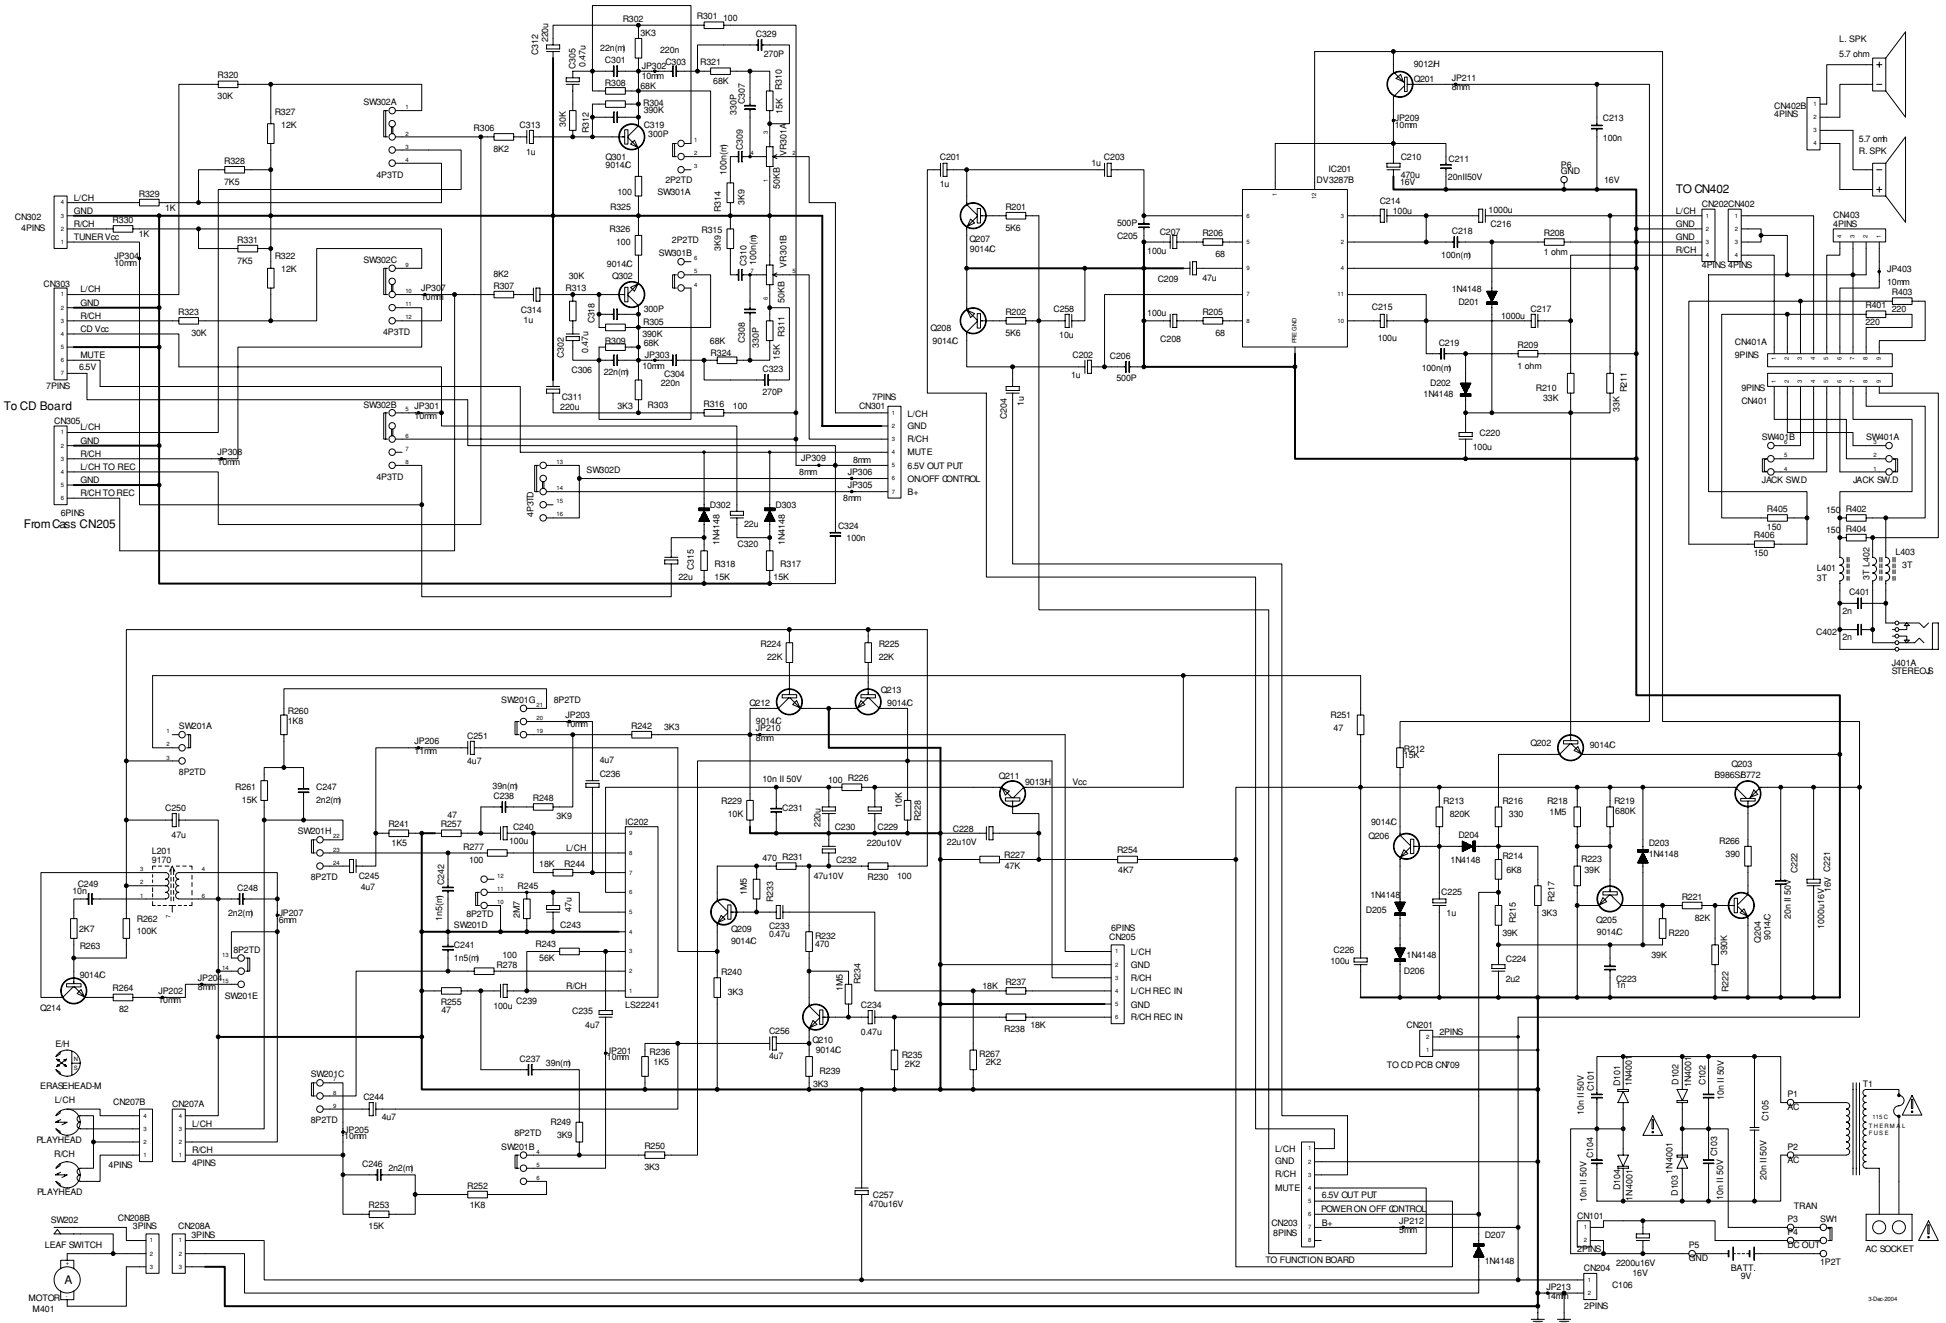

GRUNDIG

RRCD 3410

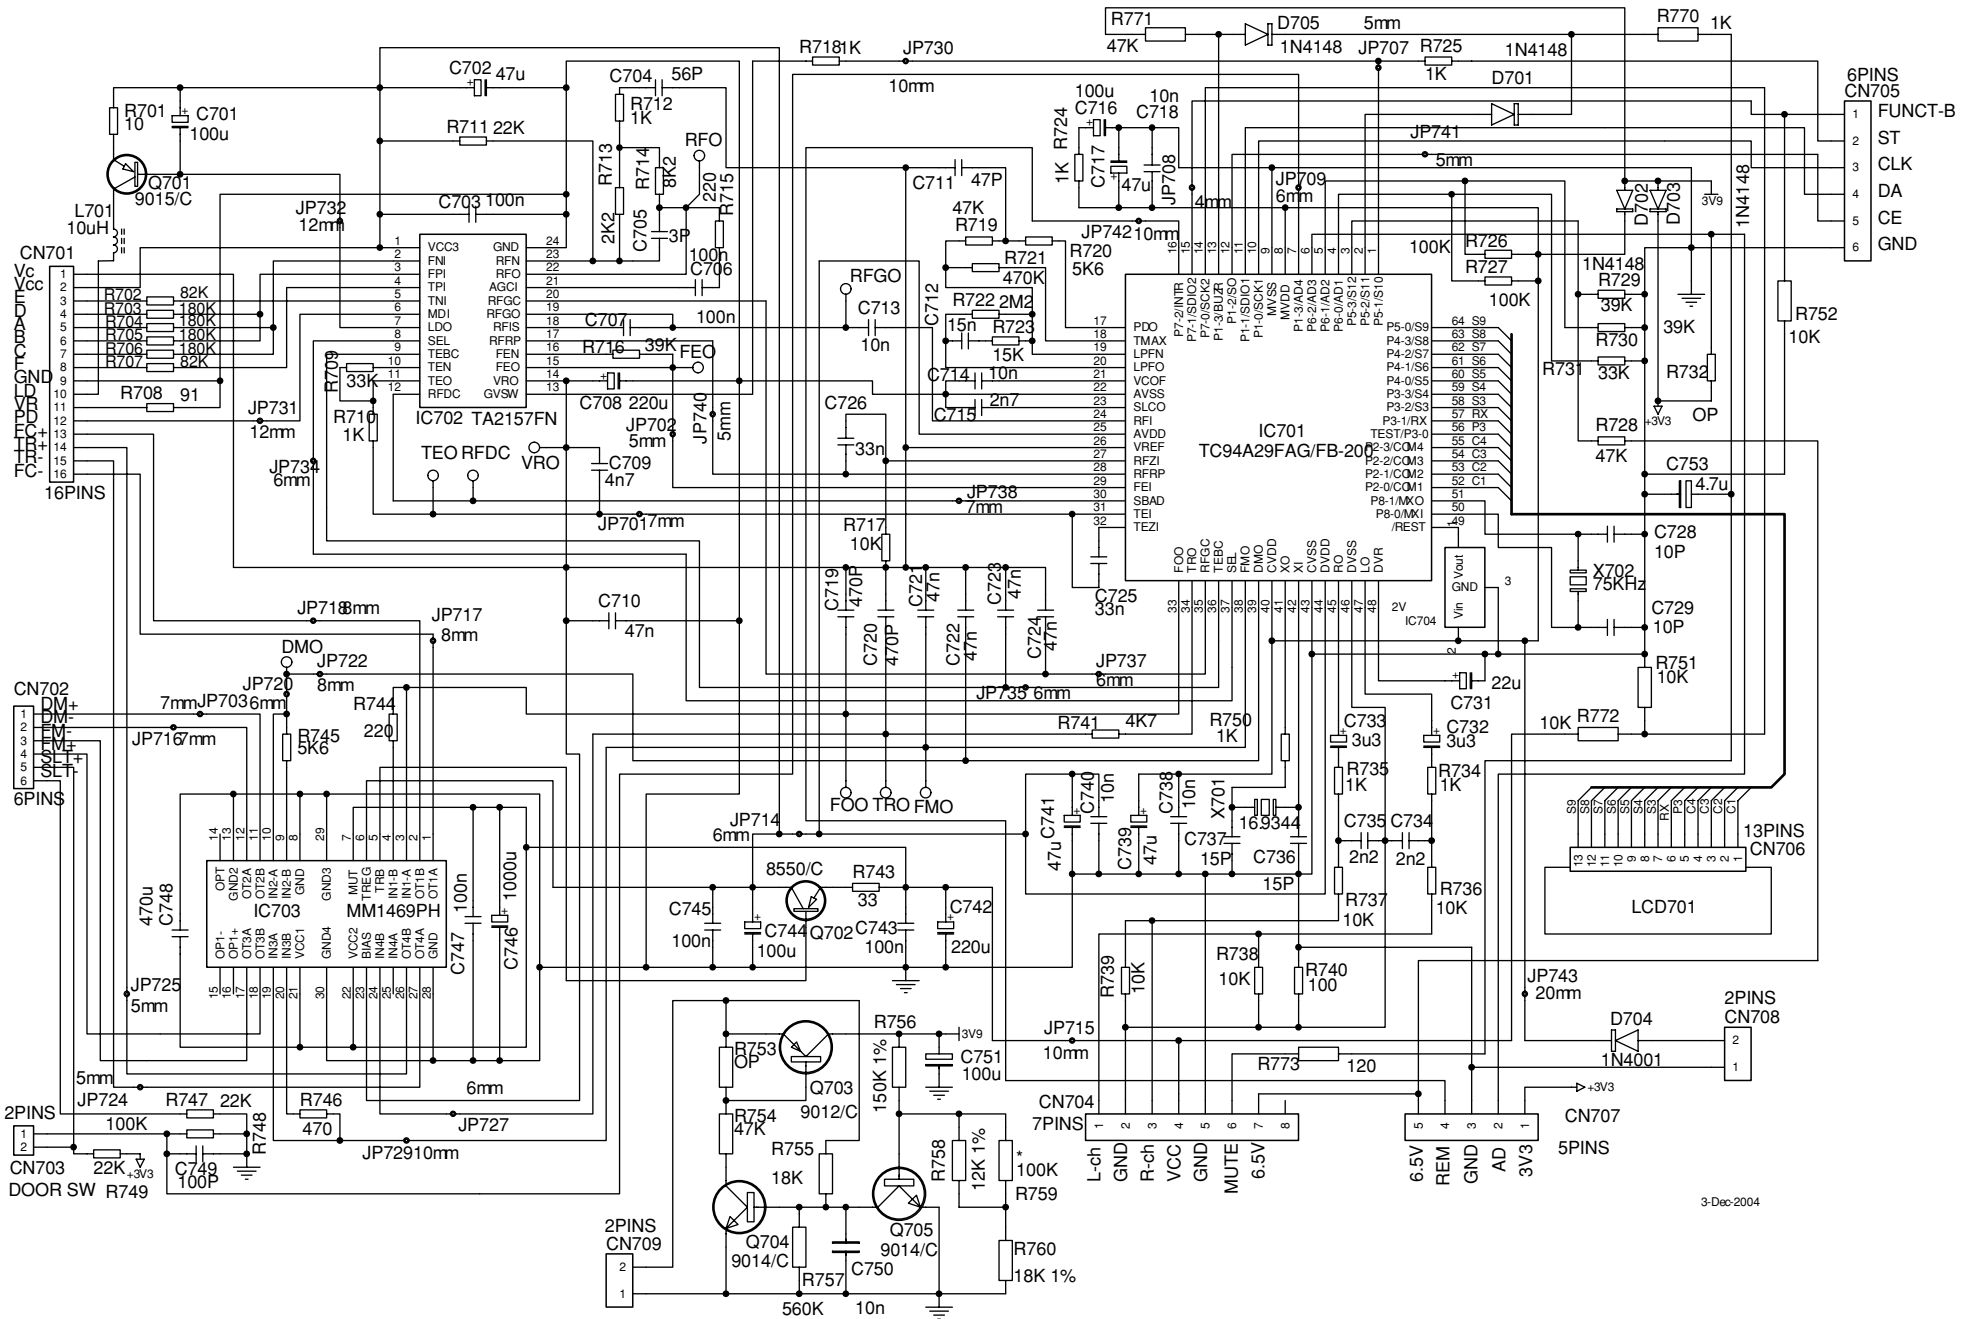
IC701
TC94A29FAG/FB-200
IC702 TA2157FN
IC703
MM1469PH
IC704
CN701
16PINS
CN702
6PINS
CN703
DOOR SW
2PINS
CN704
7PINS
CN705
6PINS
FUNCT-B
ST
CLK
DA
CE
GND
CN706
13PINS
LCD701
CN707
5PINS
CN708
2PINS
CN709
2PINS
3-Dec-2004

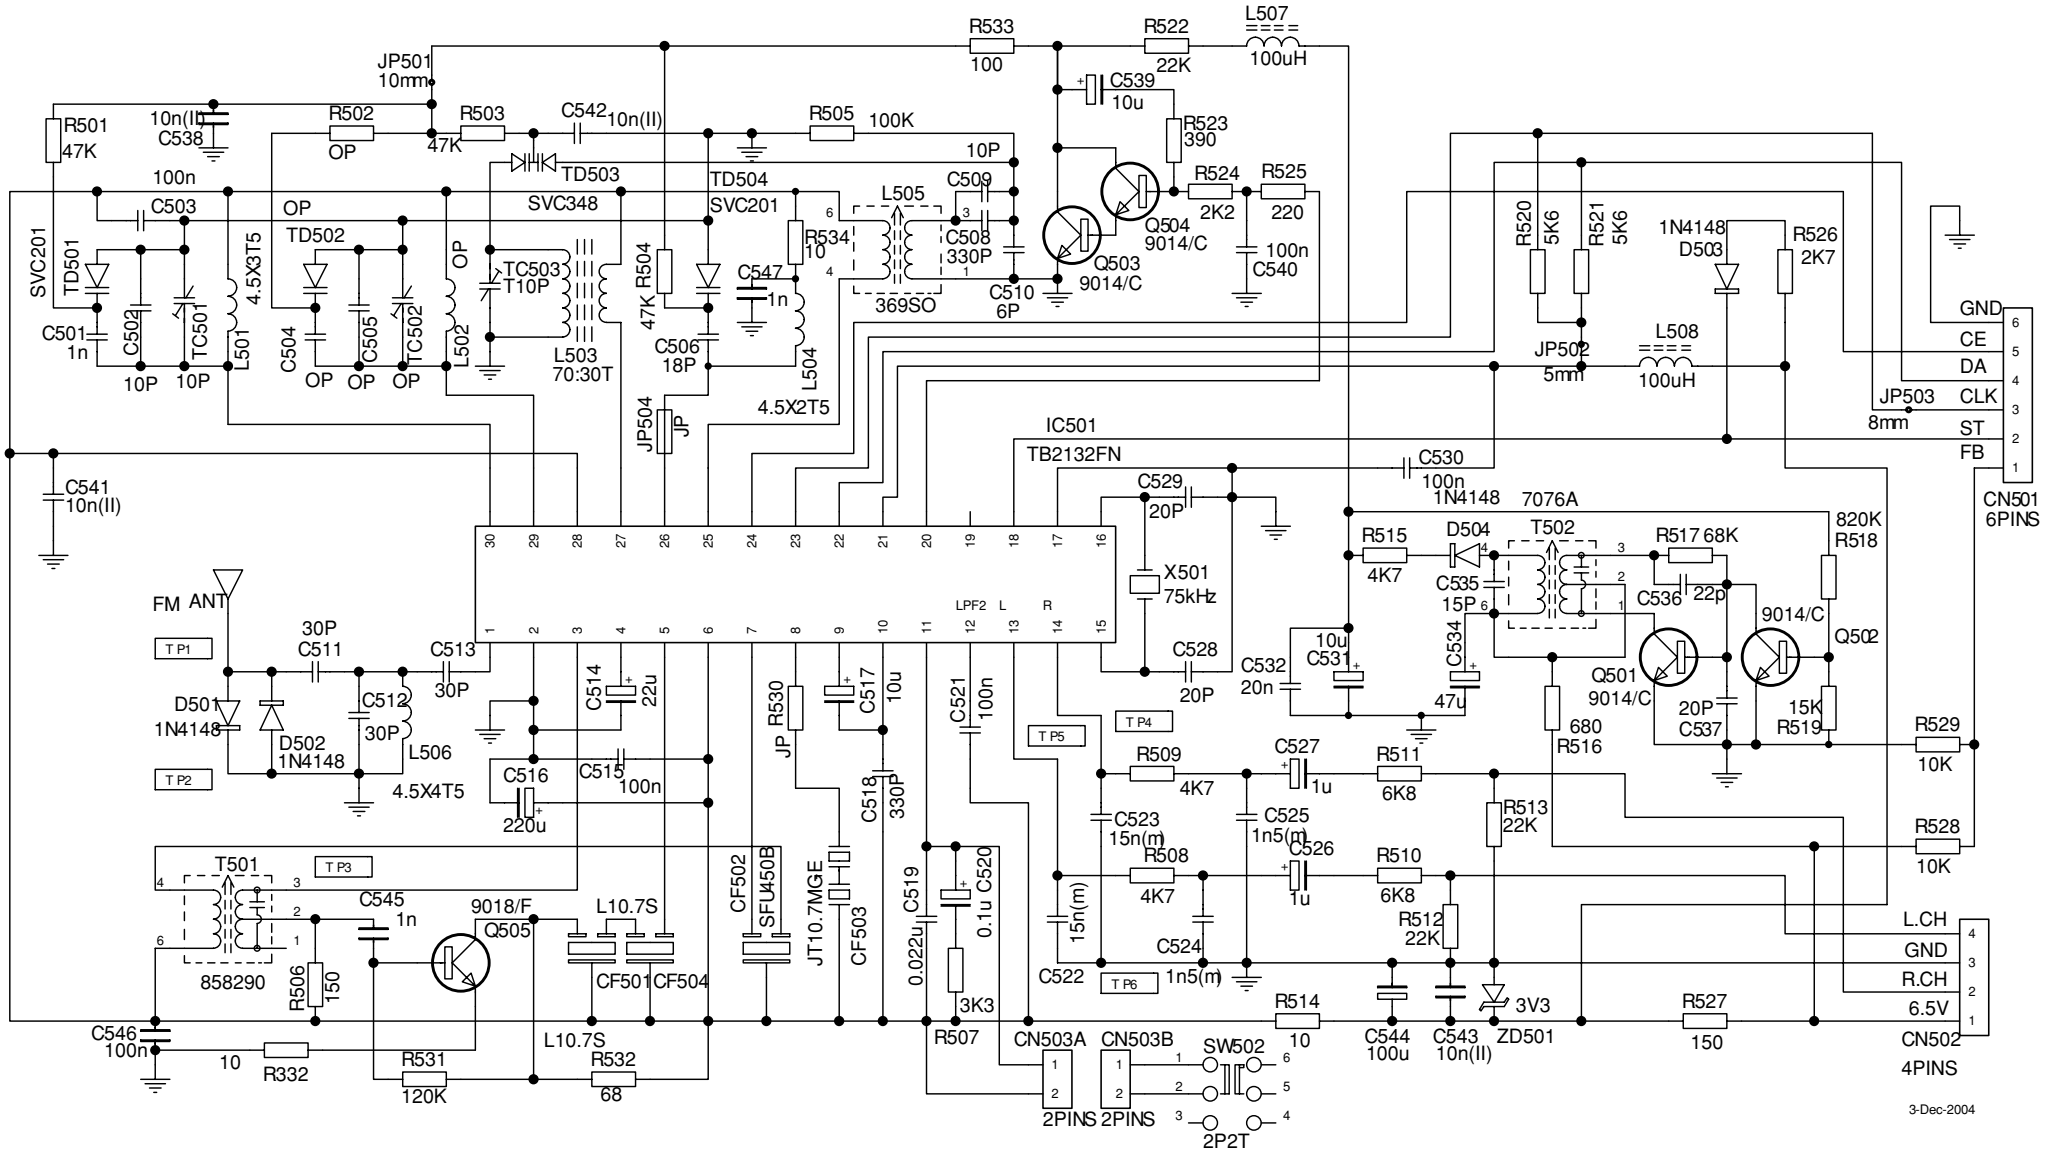
JP501
10mm
R501
47K
10n(II)
C538
R502
OP
R503
47K
C542
10n(II)
R505
100K
R533
100
R522
22K
L507
100uH
C539
10u
R523
390
10P
TD503
TD504
SVC348
SVC201
C503
100n
OP
TD502
SVC201
TD501
C501
1n
C502
10P
TC501
10P
L501
4.5X3T5
C504
OP
C505
OP
TC502
OP
L502
OP
TC503
T10P
L503
70:30T
R504
47K
C506
18P
JP504
JP
C547
1n
L504
4.5X2T5
L505
369SO
R534
10
C509
C508
330P
C510
6P
Q504
9014/C
Q503
9014/C
R524
2K2
R525
220
100n
C540
R520
5K6
R521
5K6
1N4148
D503
R526
2K7
JP502
5mm
L508
100uH
JP503
8mm
GND
CE
DA
CLK
ST
FB
CN501
6PINS
IC501
TB2132FN
C530
100n
1N4148
7076A
C529
20P
X501
75kHz
C528
20P
C541
10n(II)
R515
4K7
D504
T502
R517 68K
820K
R518
C535
15P
C536
22p
9014/C
Q502
Q501
9014/C
20P
C537
15K
R519
680
R516
C532
20n
10u
C531
47u
C534
R529
10K
R528
10K
FM ANT
T P1
T P2
30P
C511
C513
30P
D501
1N4148
C512
30P
D502
1N4148
L506
4.5X4T5
C514
22u
C516
220u
C515
100n
JP
R530
C517
10u
C518
330P
C521
100n
T P5
T P4
R509
4K7
C527
1u
R511
6K8
C523
15n(m)
C525
1n5(m)
C526
1u
R508
4K7
R510
6K8
R513
22K
R512
22K
C524
1n5(m)
C522
15n(m)
T P6
T501
T P3
858290
C545
1n
9018/F
Q505
L10.7S
CF501
CF504
CF502
SFU450B
JT10.7MGE
CF503
C519
0.022u
C520
0.1u
3K3
R507
R506
150
C546
100n
10
R332
R531
120K
L10.7S
R532
68
CN503A
CN503B
SW502
2PINS
2PINS
2P2T
R514
10
C544
100u
C543
10n(II)
ZD501
3V3
R527
150
L.CH
GND
R.CH
6.5V
CN502
4PINS
3-Dec-2004

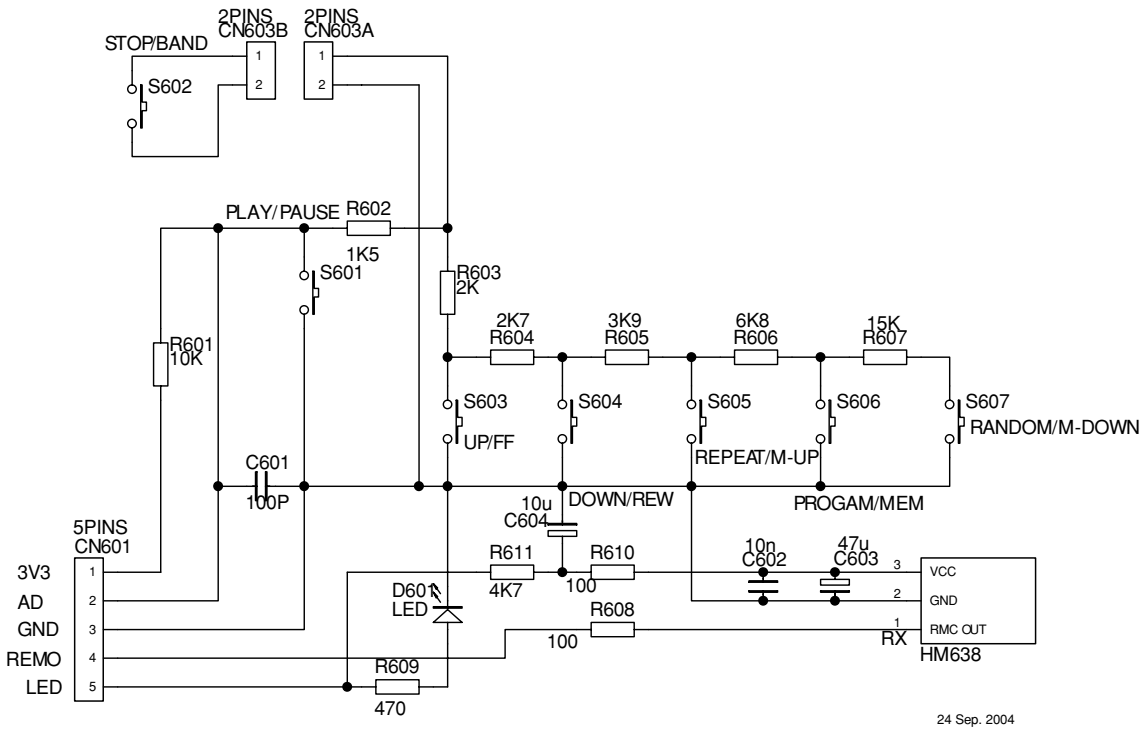
2PINS
CN603B
2PINS
CN603A
STOP/BAND
S602
PLAY/PAUSE
R602
1K5
S601
R603
2K
R601
10K
2K7
R604
3K9
R605
6K8
R606
15K
R607
S603
S604
S605
S606
S607
UP/FF
REPEAT/M-UP
RANDOM/M-DOWN
C601
100P
10u
C604
DOWN/REW
PROGAM/MEM
5PINS
CN601
3V3
AD
GND
REMO
LED
R611
4K7
R610
100
10n
C602
47u
C603
D601
LED
R608
100
R609
470
VCC
GND
RMC OUT
RX
HM638
24 Sep. 2004

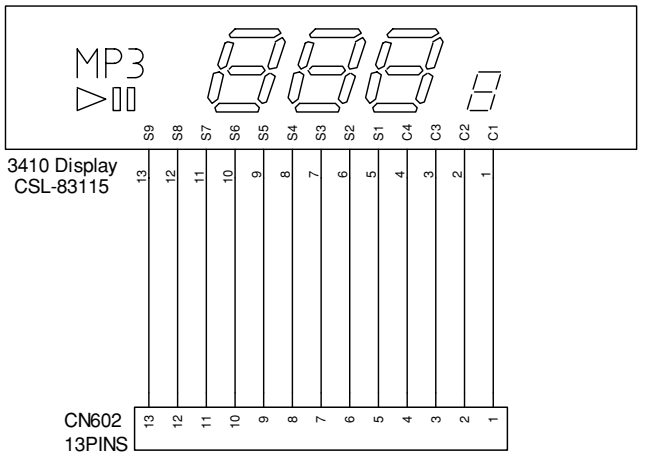
MP3
3410 Display
CSL-83115
S9 S8 S7 S6 S5 S4 S3 S2 S1 C4 C3 C2 C1
13 12 11 10 9 8 7 6 5 4 3 2 1
CN602
13PINS

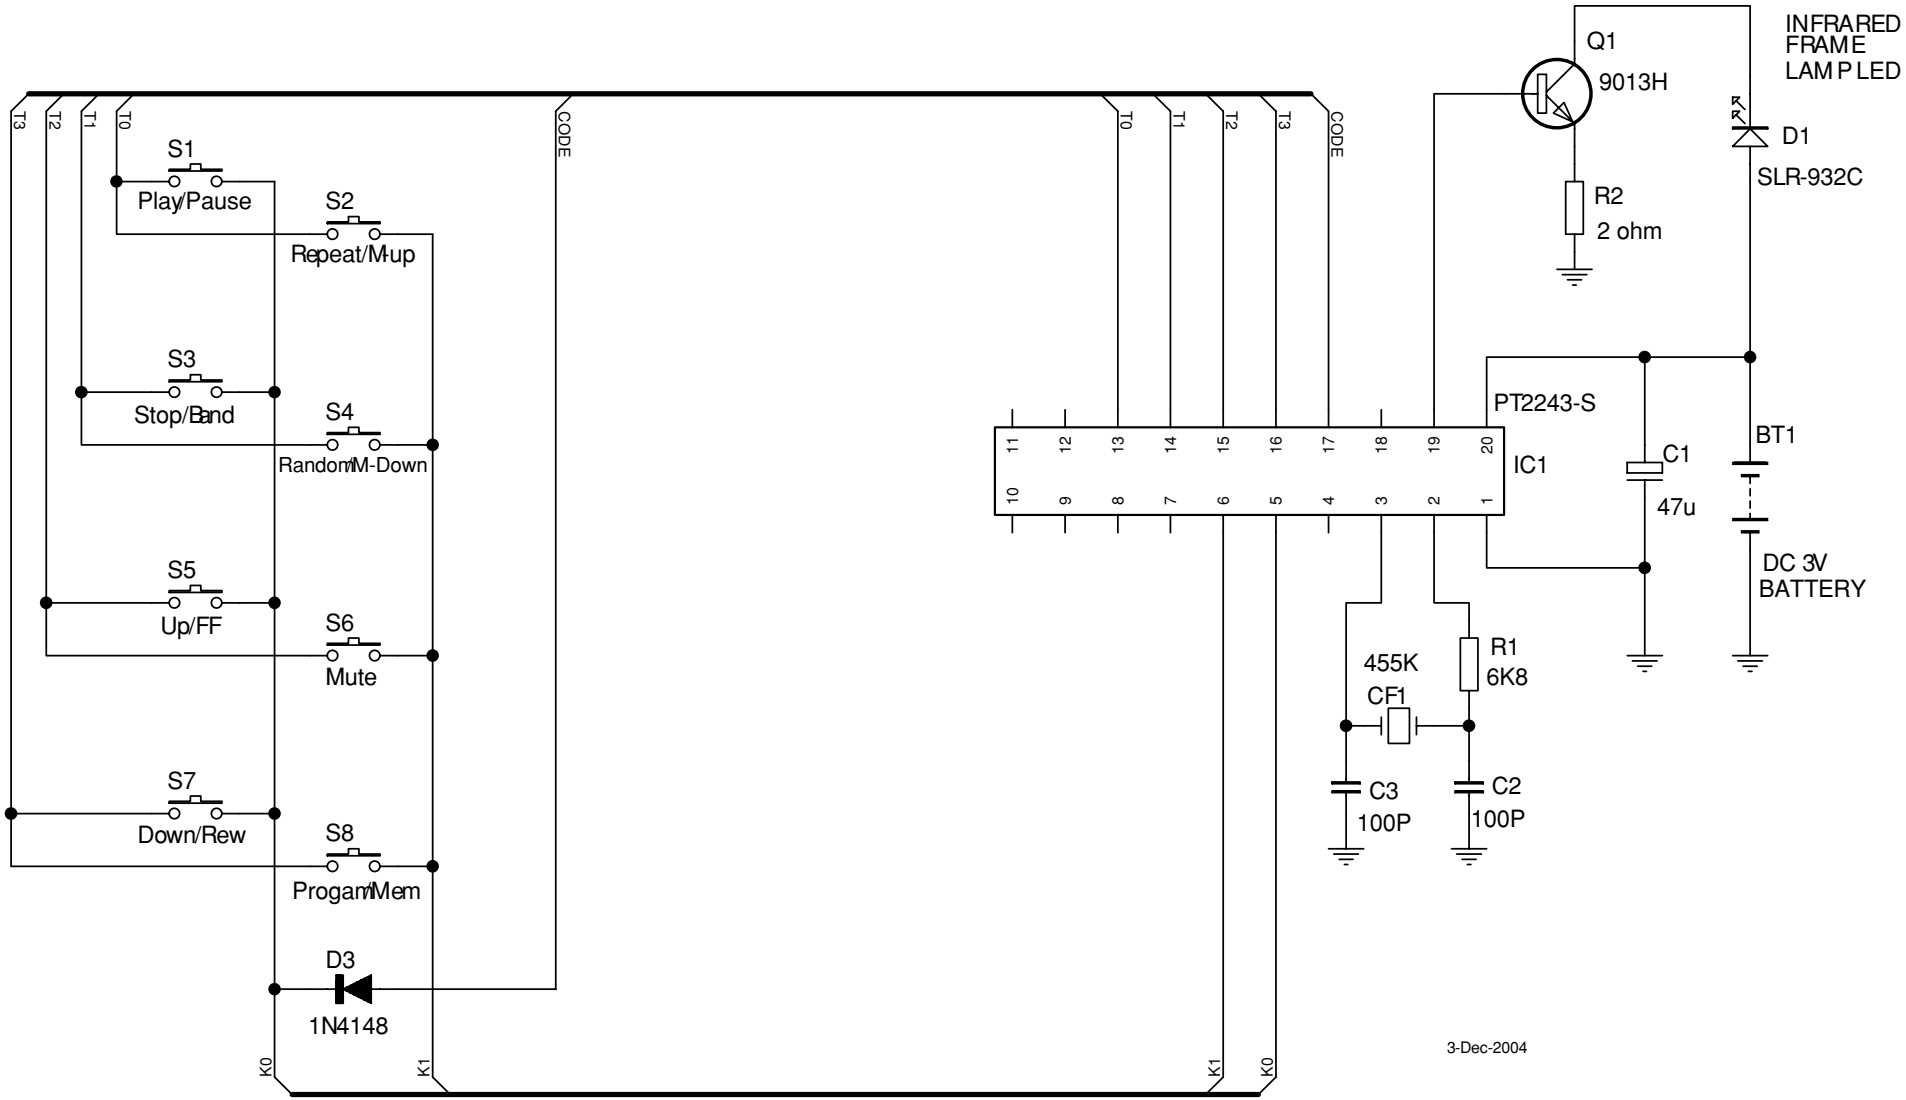
T3
T2
T1
T0
CODE
S1
Play/Pause
S2
Repeat/M-up
S3
Stop/Band
S4
Random/M-Down
S5
Up/FF
S6
Mute
S7
Down/Rew
S8
Progam/Mem
D3
1N4148
K0
K1
T0
T1
T2
T3
CODE
K1
K0
Q1
9013H
INFRARED
FRAME
LAMP LED
D1
SLR-932C
R2
2 ohm
PT2243-S
IC1
C1
47u
BT1
DC 3V
BATTERY
455K
CF1
R1
6K8
C3
100P
C2
100P
3-Dec-2004

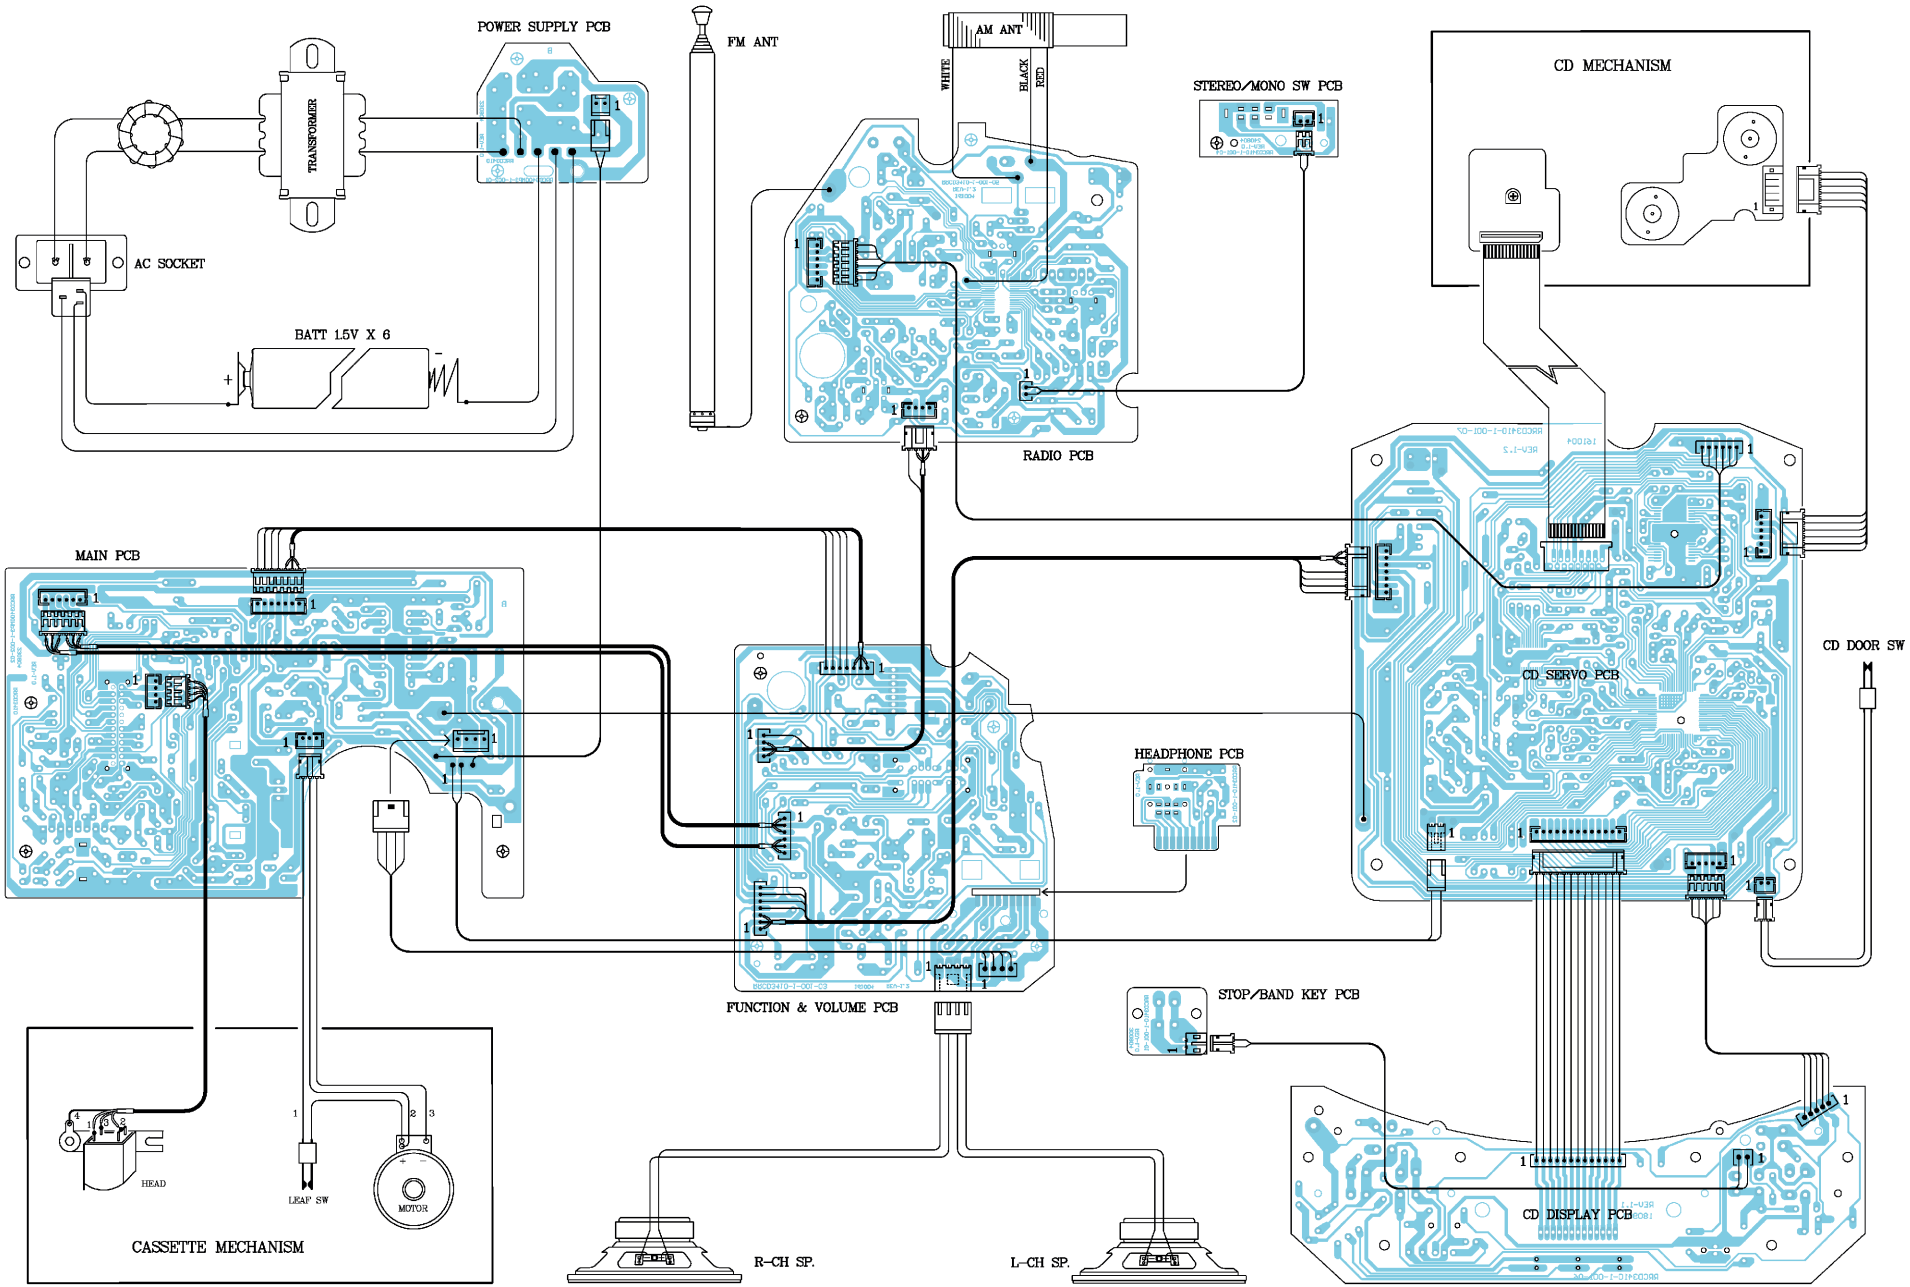
POWER SUPPLY PCB
TRANSFORMER
AC SOCKET
BATT 1.5V X 6
FM ANT
AM ANT
WHITE
BLACK
RED
STEREO/MONO SW PCB
RADIO PCB
CD MECHANISM
MAIN PCB
CD SERVO PCB
CD DOOR SW
HEADPHONE PCB
FUNCTION & VOLUME PCB
STOP/BAND KEY PCB
CD DISPLAY PCB
HEAD
LEAF SW
MOTOR
CASSETTE MECHANISM
R-CH SP.
L-CH SP.

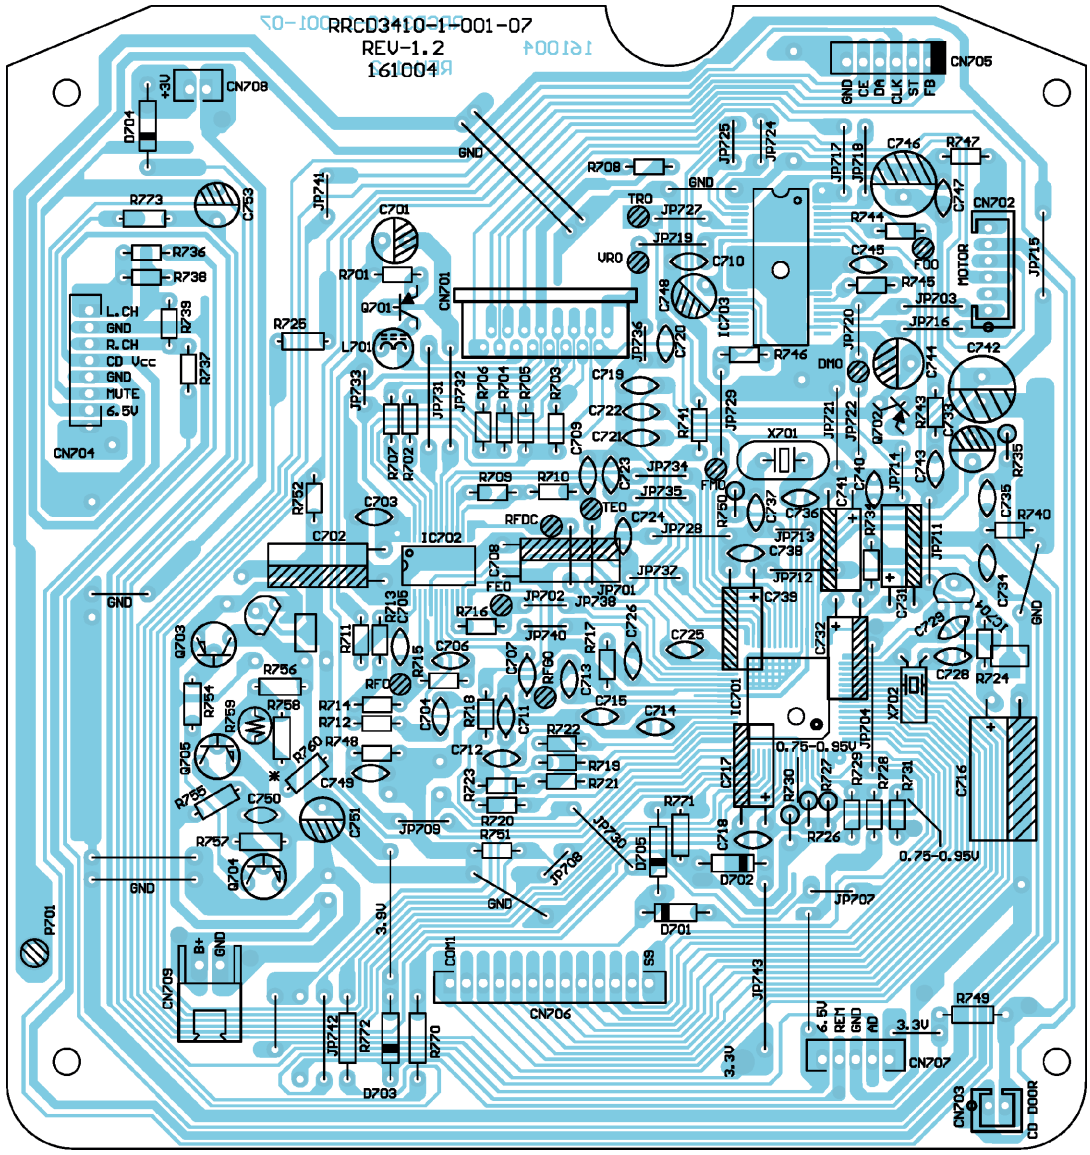
RRCD3410-1-001-07
REV-1.2
161004
CN708
CN705
GND
CE
DA
CLK
ST
FB
+3V
D704
R773
C753
R736
R738
L.CH
GND
R.CH
CD Vcc
GND
MUTE
6.5V
CN704
R739
R737
JP741
C701
R701
Q701
CN701
L701
R726
JP733
JP731
JP732
R706
R704
R705
R703
C719
C722
C721
C709
R707
R702
JP736
C720
C748
IC703
R746
JP725
JP724
JP717
JP718
C746
R747
C747
CN702
MOTOR
JP715
R744
R700
C745
R745
JP703
JP716
C742
C744
R743
C733
R735
JP720
DMO
JP721
JP722
R702
JP729
X701
JP714
C743
C740
C741
C737
C736
R734
JP711
C735
R740
C734
GND
C721
C728
R724
C729
C727
X702
JP704
0.75-0.95V
C716
0.75-0.95V
R729
R728
R731
R727
R730
R726
C717
IC701
C732
C738
JP712
JP713
C739
JP707
R749
3.3V
CN707
6.5V
REM
GND
AD
CN703
CD DOOR
R708
JP727
TRO
JP719
VRO
C710
GND
R709
R710
C723
JP734
JP735
TEO
C724
JP728
FM
R750
RFDC
C702
IC702
C703
R762
C708
FEO
JP702
JP701
JP738
JP737
C726
C725
R716
JP740
C706
C707
R717
C713
C715
C714
RFO
RFDO
R715
C705
R718
C711
R722
R719
R721
C712
R723
R720
R751
C704
R711
R712
R748
C749
R760
R758
R756
R754
R759
Q703
Q705
R755
C750
C751
R757
Q704
JP709
JP708
JP730
R771
D705
D702
D701
C718
JP706
GND
3.3V
COM1
S9
CN706
JP743
R772
R770
JP742
D703
CN709
B+
GND
P701
C754
C752
C755
C756
C757
C758
C759
C760
C761
C762
C763
C764
C765
C766
C767
C768
C769
C770
C771
C772
C773
C774
C775
C776
C777
C778
C779
C780
C781
C782
C783
C784
C785
C786
C787
C788
C789
C790
C791
C792
C793
C794
C795
C796
C797
C798
C799
C800
C801
C802
C803
C804
C805
C806
C807
C808
C809
C810
C811
C812
C813
C814
C815
C816
C817
C818
C819
C820
C821
C822
C823
C824
C825
C826
C827
C828
C829
C830
C831
C832
C833
C834
C835
C836
C837
C838
C839
C840
C841
C842
C843
C844
C845
C846
C847
C848
C849
C850
C851
C852
C853
C854
C855
C856
C857
C858
C859
C860
C861
C862
C863
C864
C865
C866
C867
C868
C869
C870
C871
C872
C873
C874
C875
C876
C877
C878
C879
C880
C881
C882
C883
C884
C885
C886
C887
C888
C889
C890
C891
C892
C893
C894
C895
C896
C897
C898
C899
C900
C901
C902
C903
C904
C905
C906
C907
C908
C909
C910
C911
C912
C913
C914
C915
C916
C917
C918
C919
C920
C921
C922
C923
C924
C925
C926
C927
C928
C929
C930
C931
C932
C933
C934
C935
C936
C937
C938
C939
C940
C941
C942
C943
C944
C945
C946
C947
C948
C949
C950
C951
C952
C953
C954
C955
C956
C957
C958
C959
C960
C961
C962
C963
C964
C965
C966
C967
C968
C969
C970
C971
C972
C973
C974
C975
C976
C977
C978
C979
C980
C981
C982
C983
C984
C985
C986
C987
C988
C989
C990
C991
C992
C993
C994
C995
C996
C997
C998
C999
C1000

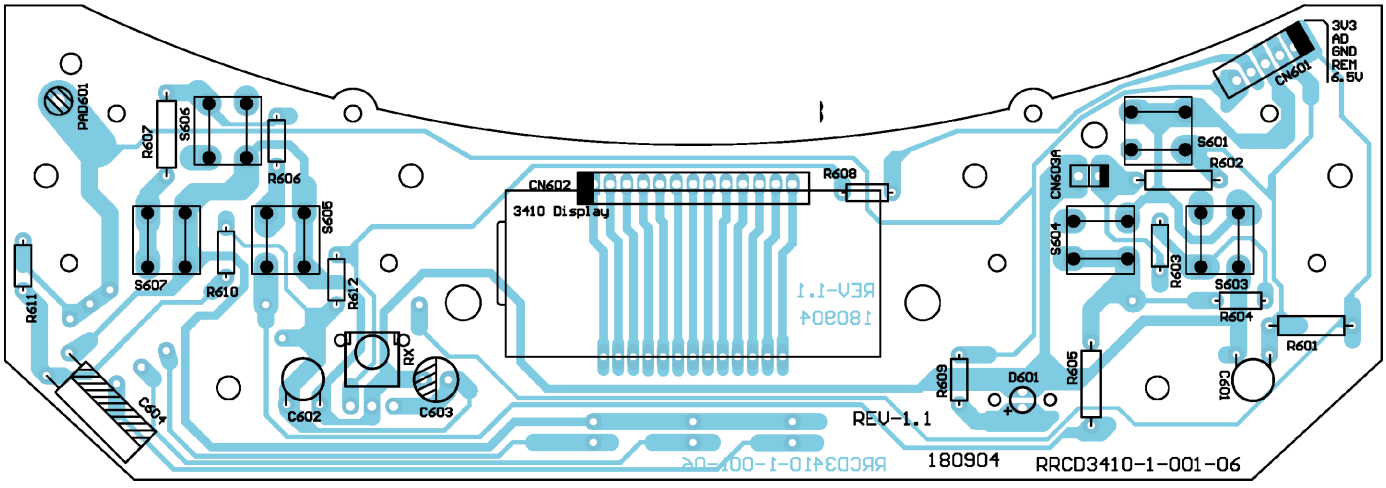
PAD601
R607
S606
R606
S607
R610
S605
R611
R612
C604
C602
C603
RX1
CN602
3410 Display
R608
REV-1.1
180904
RRCD3410-1-001-06
CN601
3V3
AD
GND
REM
6.5V
S601
R602
CN603A
S604
R603
S603
R604
R601
C601
R609
D601
R605
C605

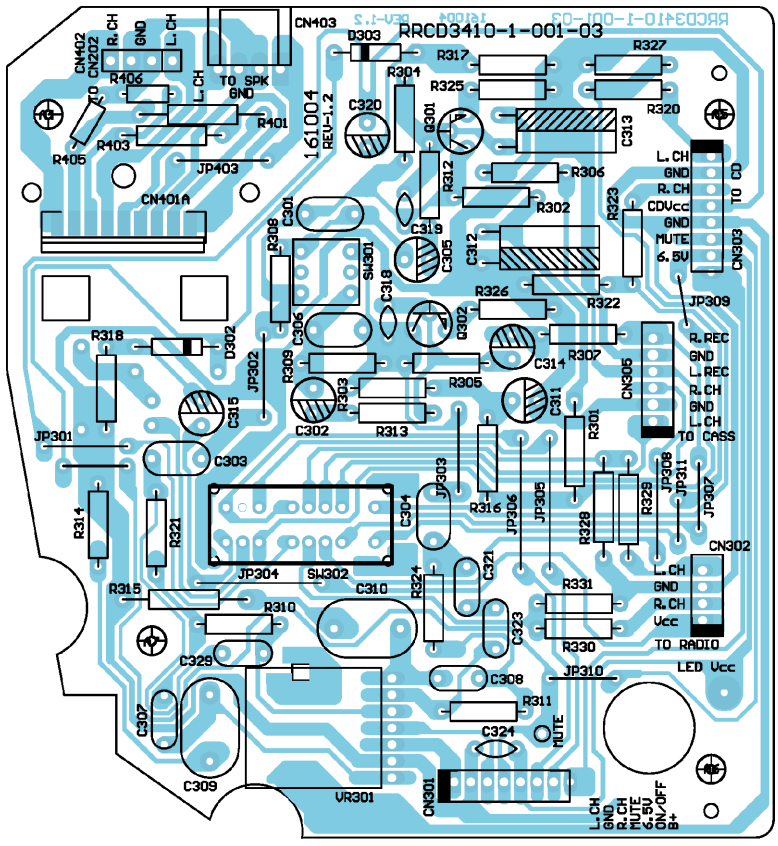
RRCD3410-1-001-03
CN403
D303
R317
R327
R304
R325
R320
C320
Q301
C313
R312
R306
R302
R323
C319
C305
C312
SW301
C318
R326
R322
Q302
C314
R307
R318
D302
JP302
C315
R309
R303
R305
C311
R301
C302
R313
JP301
C303
JP303
R316
JP306
JP305
R328
JP308
JP311
JP307
R314
R321
C304
JP304
SW302
C310
R324
C321
R331
C323
R315
R310
R330
C329
C308
JP310
C307
R311
C324
MUTE
C309
VR301
CN301
CN401A
CN402
CN202
R406
R403
R405
R401
JP403
161004
REV-1.2
CN303
JP309
CN305
CN302
TO CD
TO CASS
TO RADIO
LED Vcc

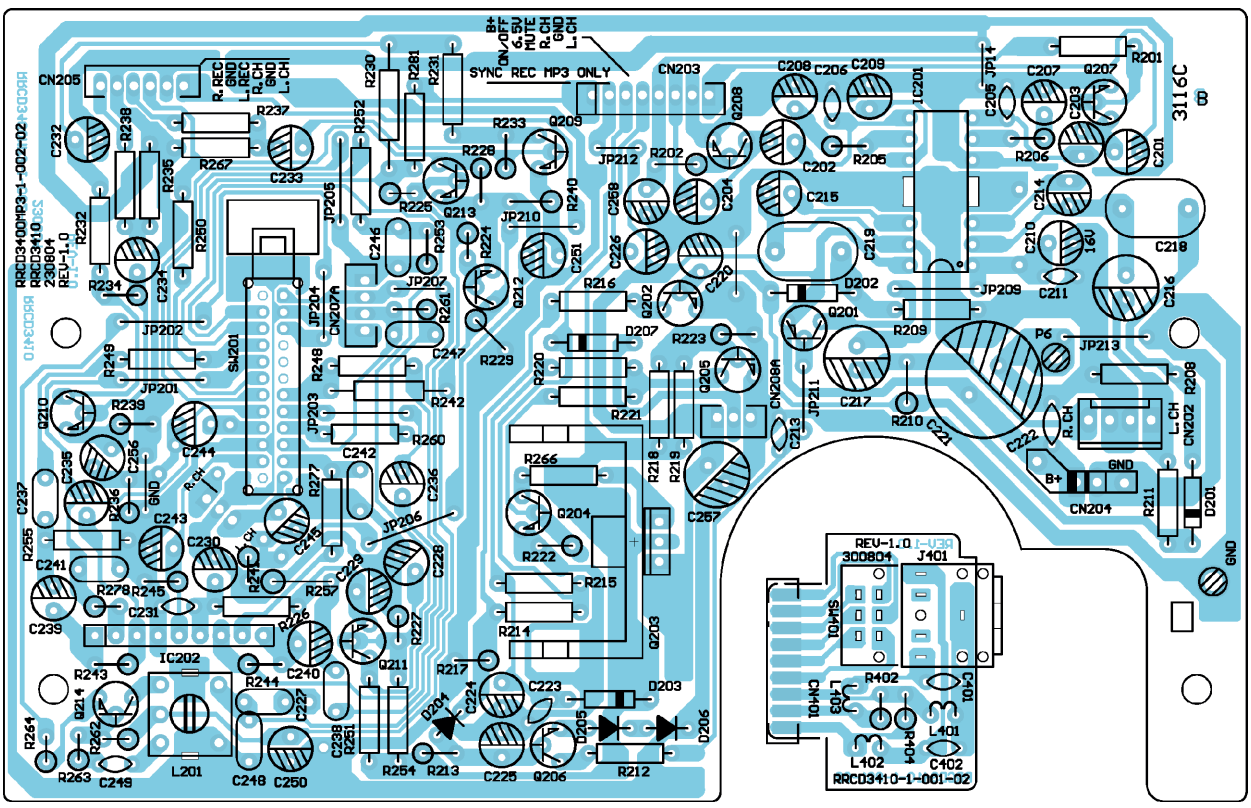
RRCD3400HP3-1-002-02
RRCD3410
230804
REV-1.0
SYNC REC MP3 ONLY
CN205
CN203
CN204
CN207A
CN208A
IC202
IC201
SW201
J401
REV-1.0
300804
RRCD3410-1-001-02
3116C
B
L201
L401
L402
C402
R402
P6

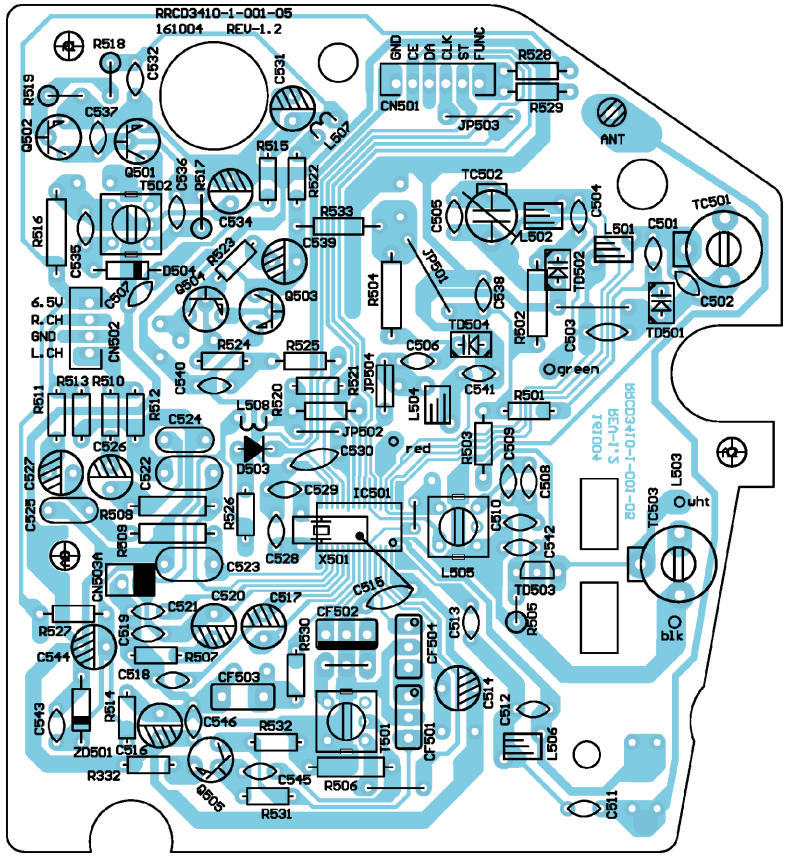
RRCD3410-1-001-05
161004 REV-1.2
CN501
JP503
ANT
TC501
TC502
C502
TD501
TD502
TD504
L501
L502
L503
L504
L505
L506
IC501
X501
CF501
CF502
CF503
CF504
green
red
wht
blk

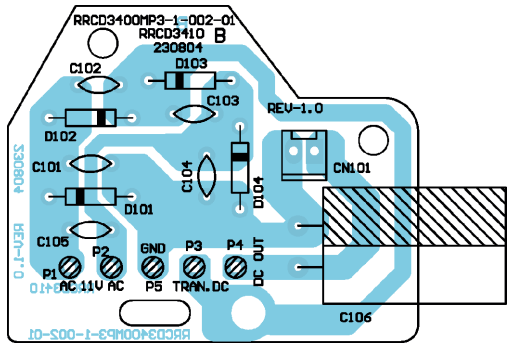
RRCD3400MP3-1-002-01
RRCD3410 B
230804
REV-1.0
CN101
P1
P2
GND
P3
P4
P5
AC 11V AC
TRAN.DC
DC OUT
C106

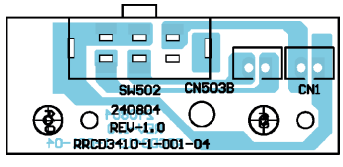
SW502
CN503B
CN1
240804
REV-1.0
RRCD3410-1-001-04

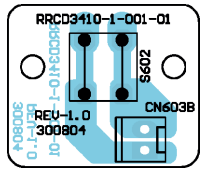
RRCD3410-1-001-01
S602
CN603B
REV-1.0
300804

ALIGNMENT PROCEDURE

GRUNDIG RRCD3410

INSTRUMENTS REQUIRED

1. Signal Generator
2. FM Signal Generator
3. FM/AM IF Sweep Generator (10.7 MHz for FM)
4. VTVM
5. Oscilloscope
6. Frequency counter
7. Regulated DC power supply

GENERAL PREPARATION

1. Check source voltage, DC or AC according to specificaions
2. Set function switch to band being aligned
3. Signal input should be kept as low as possible to avoid AGC and AFC function
4. Standard modulation : AM 1 KHz 30% mod
   FM 1 KHz 22.5 KHz dev

AM IF ALIGNMENT

STEP	SIGNAL SOURCE (AM RF Gen.) CONNECT TO	SET SIGNAL TO	ALIGNMENT INDICATOR (Oscilloscope, VTVM) CONNECT TO	SET RADIO DIAL TO	ADJUST	ADJUST FOR	REMARKS
1	A standard radiation loop	450KHz	TP4 or TP5 Detector output terminal and ground (TP6)	Quiet Point	T501	Maximum	Volume control at min. position
2	Repeat step 1 for max. output						

FM IF ALIGNMENT

This model requires no FM IF alignment as the IF is fixed by ceramic filter and discriminator CF502 & CF505. Please take note that correct type and same color dot of ceramic filter is used in servicing, diff color dot of ceramic filter may cause worse IF 'S' curve characteristic and distortion.

Connect IF genescope output terminal to TP4 OR TP5 & TP6 (GND) in series with a 1000Pf capacitor, connect scope input terminal to TP3 & TP6 (GND), then the IF characteristic curve can be observed.

ALIGNMENT PROCEDURE

GRUNDIG RRCD3410

FM RF ALIGNMENT

STEP	SIGNAL SOURCE (FM Signal Gen.) CONNECT TO	SET SIGNAL TO	ALIGNMENT INDICATOR (Oscilloscope, VTVM) CONNECT TO	SET RADIO DIAL TO	ADJUST	ADJUST FOR	REMARKS
1	TP1 & TP2 through matching network if necessary	87.5 MHz (modulated)	Terminals across speaker voice coil	87.5 MHz (Lowest end)	NA	NA	Digital DC Volt meter is Connected to TP 7 and grg
2		108 MHz (modulated)		108 MHz (Highest end)	L504 (Osc. Coil) stretch or squeeze	DC 8V ±0.3V	
3		88 MHz (modulated)		88 MHz	L501 (RF coil) stretch or squeeze	Maximum	Volume control at max. position
4		106 MHz (modulated)		106 MHz	TC 501 (RF trimmer)		
5	Repeat steps 3 and 4 as necessary to minimize tracking error and also steps 1 and 2 if necessary						

AM RF ALIGNMENT

STEP	SIGNAL SOURCE (AM Signal Gen.) CONNECT TO	SET SIGNAL TO	ALIGNMENT INDICATOR (Oscilloscope, VTVM) CONNECT TO	SET RADIO DIAL TO	ADJUST	ADJUST FOR	REMARKS
1	A standard radiation loop ant.	531 KHz (modulated)	Across speaker voice coil	531 KHz (Lowest end)	NA	NA	Digital DC Volt meter is Connected to TP 7 and grg
2		1622 KHz (modulated)		1622 KHz (Highest end)	T 505 (Osc.Coil)	DC 8V ±0.3V	
3		558 KHz (modulated)		558 KHz	L 503 (ant. coil)	Maximum	Volume control at max. position
4		1440 KHz (modulated)		1440 KHz	TC 503 (ant. trimmer)		
5	Repeat steps 3 and 4 as necessary to minimize tracking error and also steps 1 and 2 if necessary						

ALIGNMENT PROCEDURE

GRUNDIG RRCD3410

GENERAL PREPARATION - 1) Check source voltage, DC or AC according to specifications . 2) Set function switch to Tape being aligned .

A) MEASURING INSTRUMENTS REQUIRED FOR TAPE SPEED AND HEAD AZIMUTH ADJUSTMENT.

(1) TAPE SPEED ADJUST

MTT-111 (3000 Hz) TEST ◦

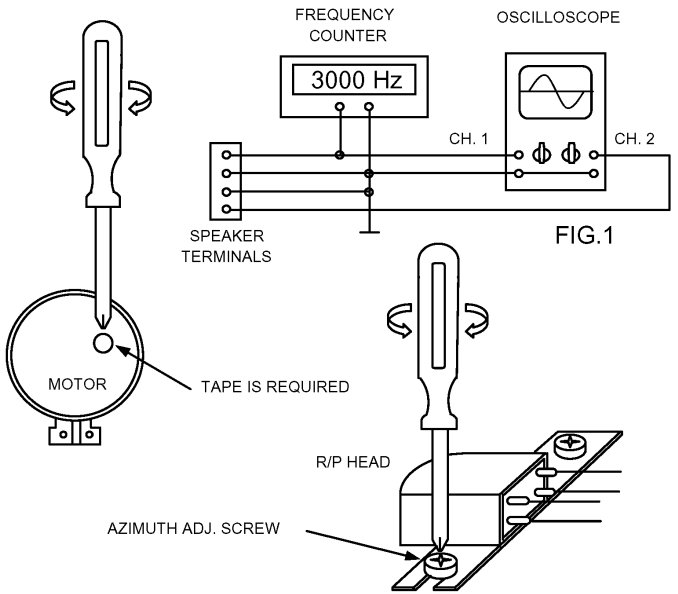

FIG.1

(2) HEAD AZIMUTH ADJUSTMENT .

2.1 - Connect the equipments as shown in the Fig. 1. (The Both Speakers loading Are Required)

2.2 - Insert a test tape (10 KHz : MTT-114) into deck.

2.3 - Press PLAY and set VOLUME at reference output.

2.4 - Adjust the azimuth adjustment screw for the max. & balance ch. output on both ch. of oscilloscope.

2.5 - Secure above screw with glue after adj. completed.

B) EQUIPMENTS REQUESTED FOR AC BIAS FREQUENCY / CURRENT ADJUSTMENT :

FIG.2

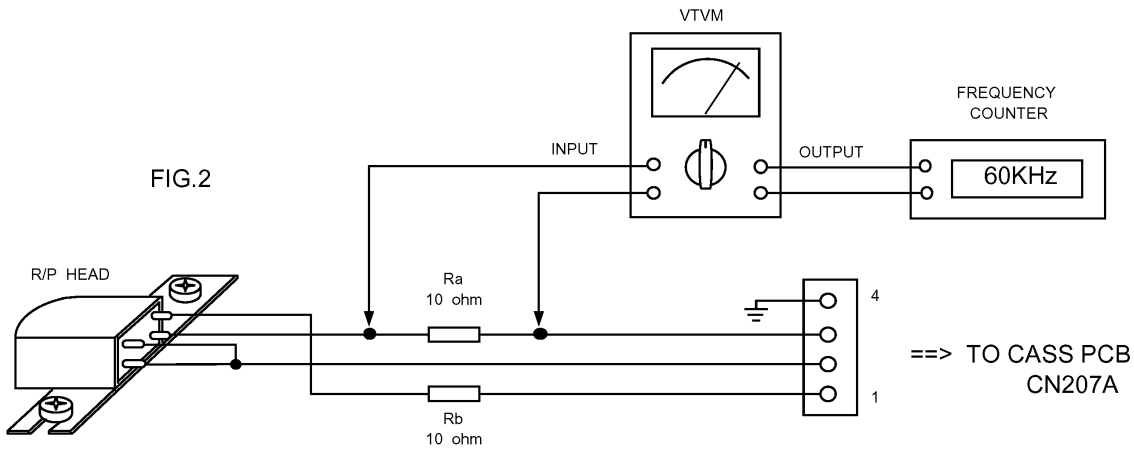

AC BIAS FREQUENCY ALIGNMENT :

Note :The test unit should be keep in recording mode and added two resistors Ra & Rb as shown in the Fig. 2 before alignment. be sure to delete the both resistors Ra & Rb after alignment completed.

Test Point	Adjust	Frequency at Beat 0	Frequency Observe at		Observe		
			Beat 1	Beat 2	Beat 0	Beat 1	Beat 2
Resistor Ra or Rb	L201	60KHz ± 0.3KHz					

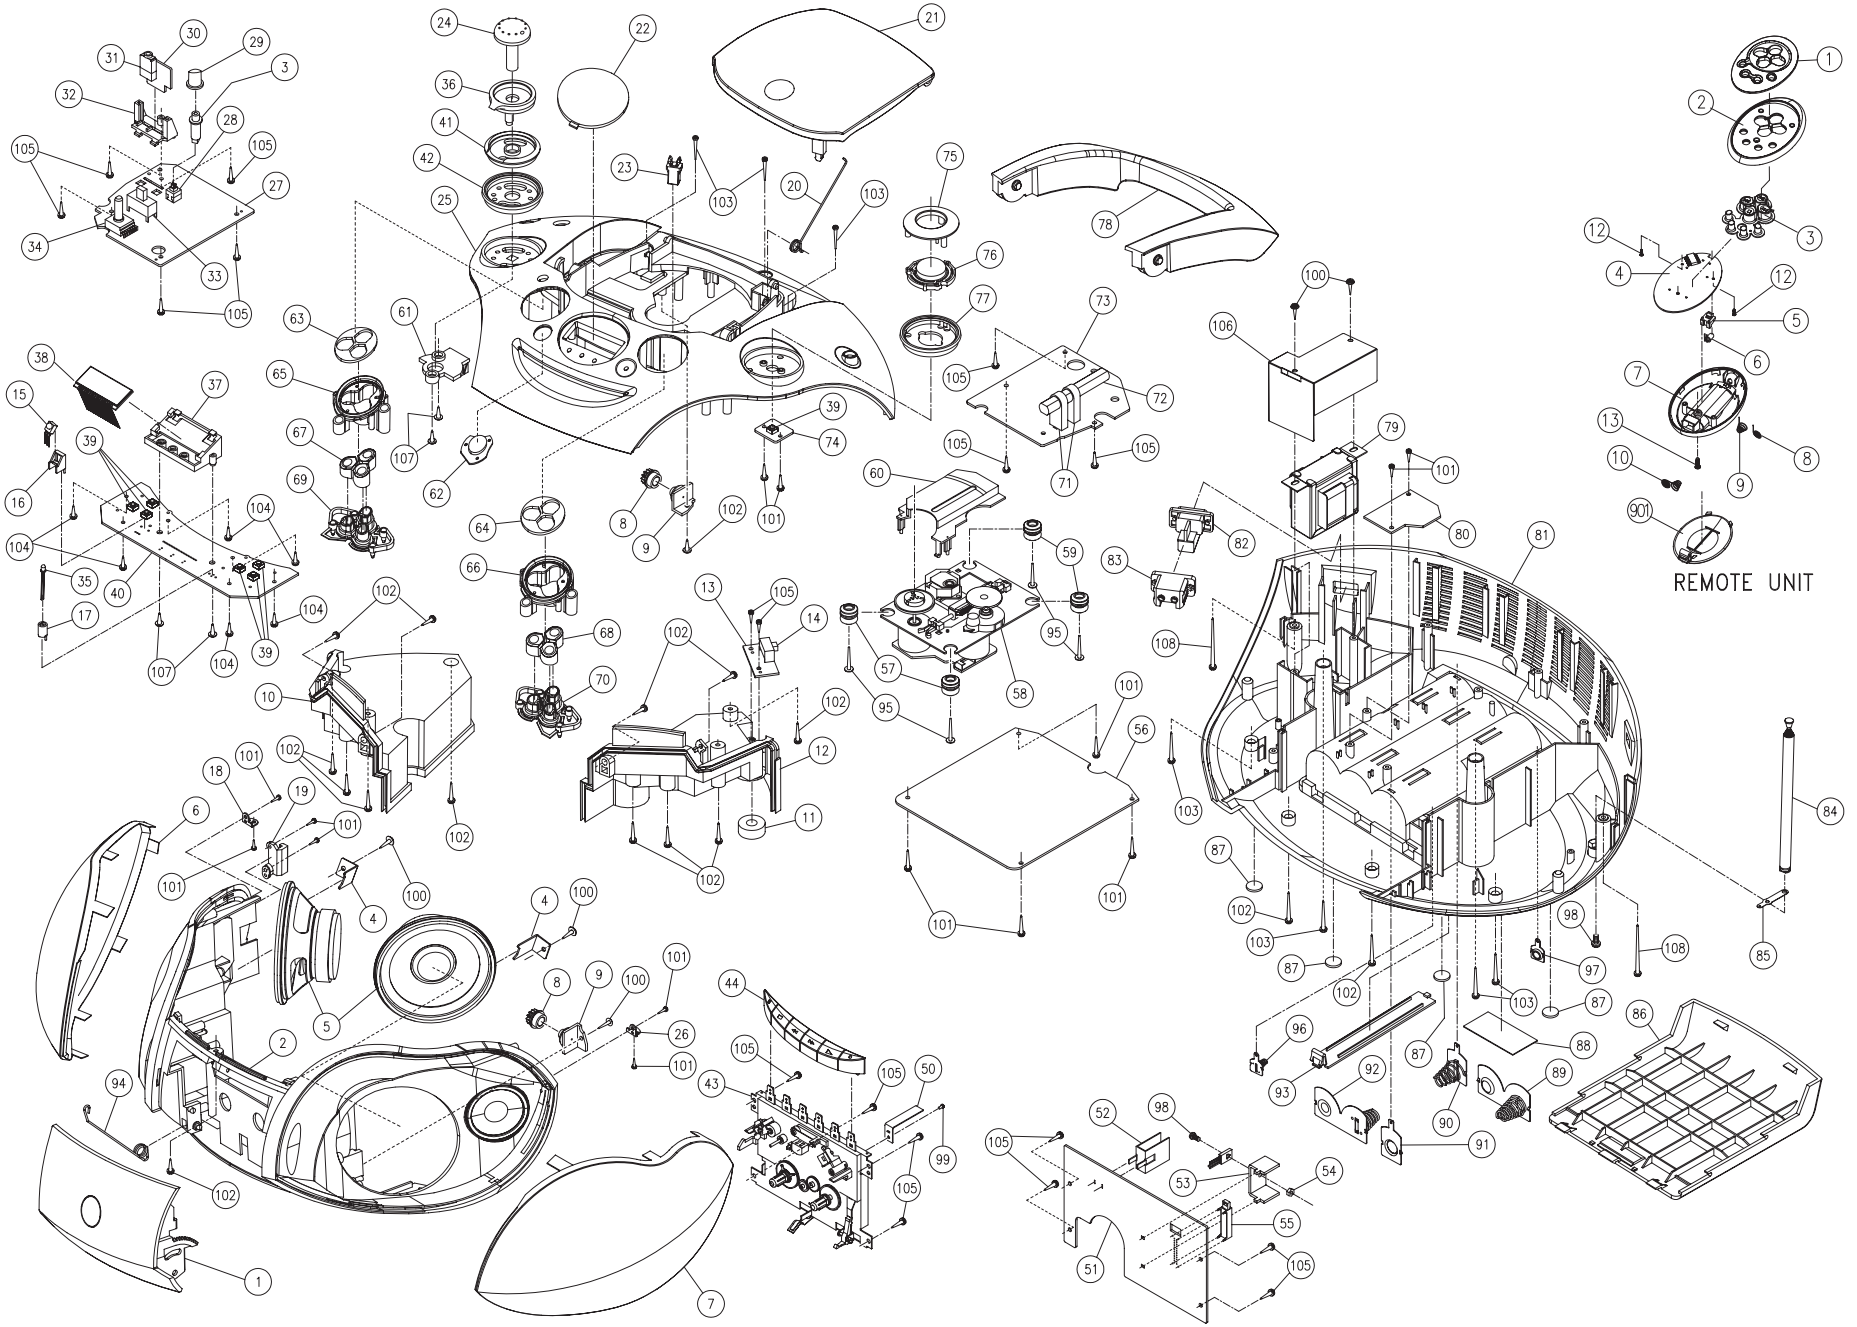
REMOTE UNIT

CS-21V

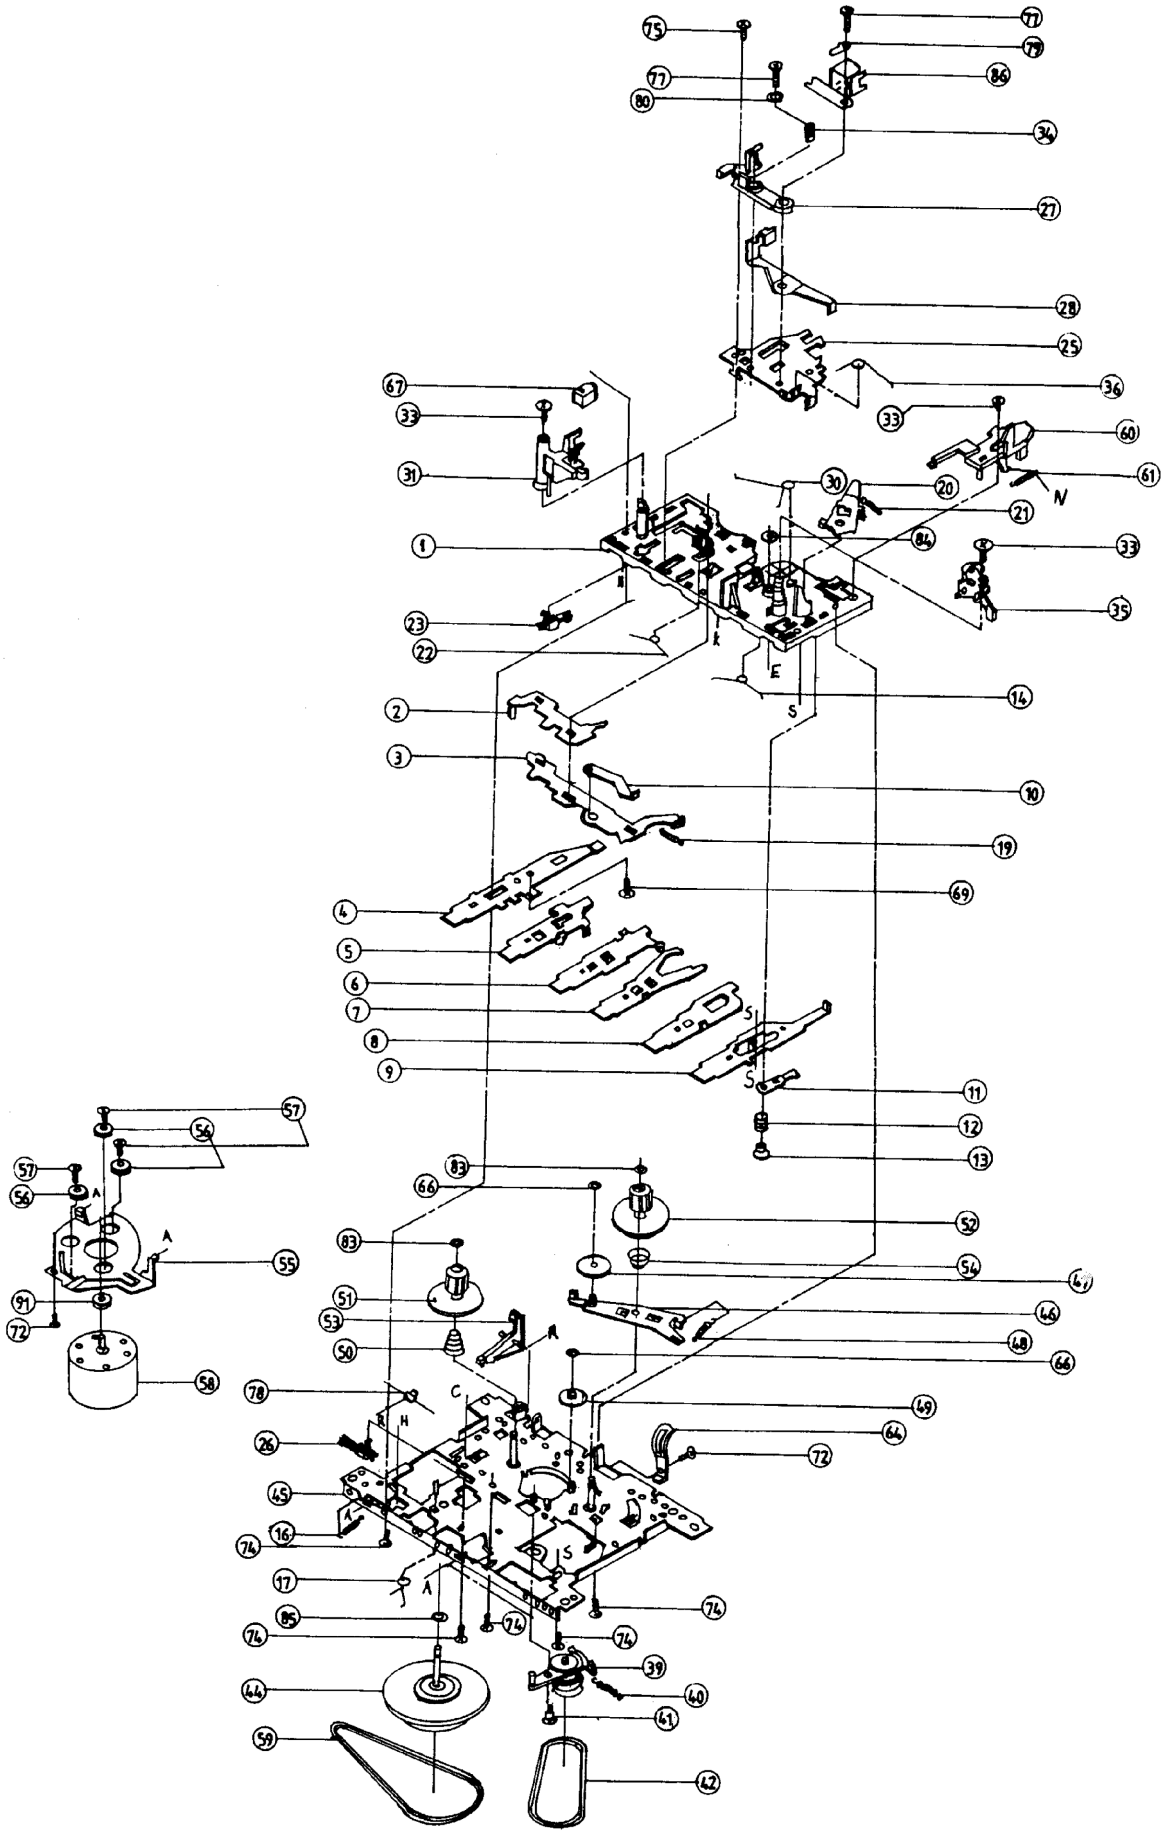

SANYO DA11B3V

CD PLAYER MECHANISM EXPLODED VIEW

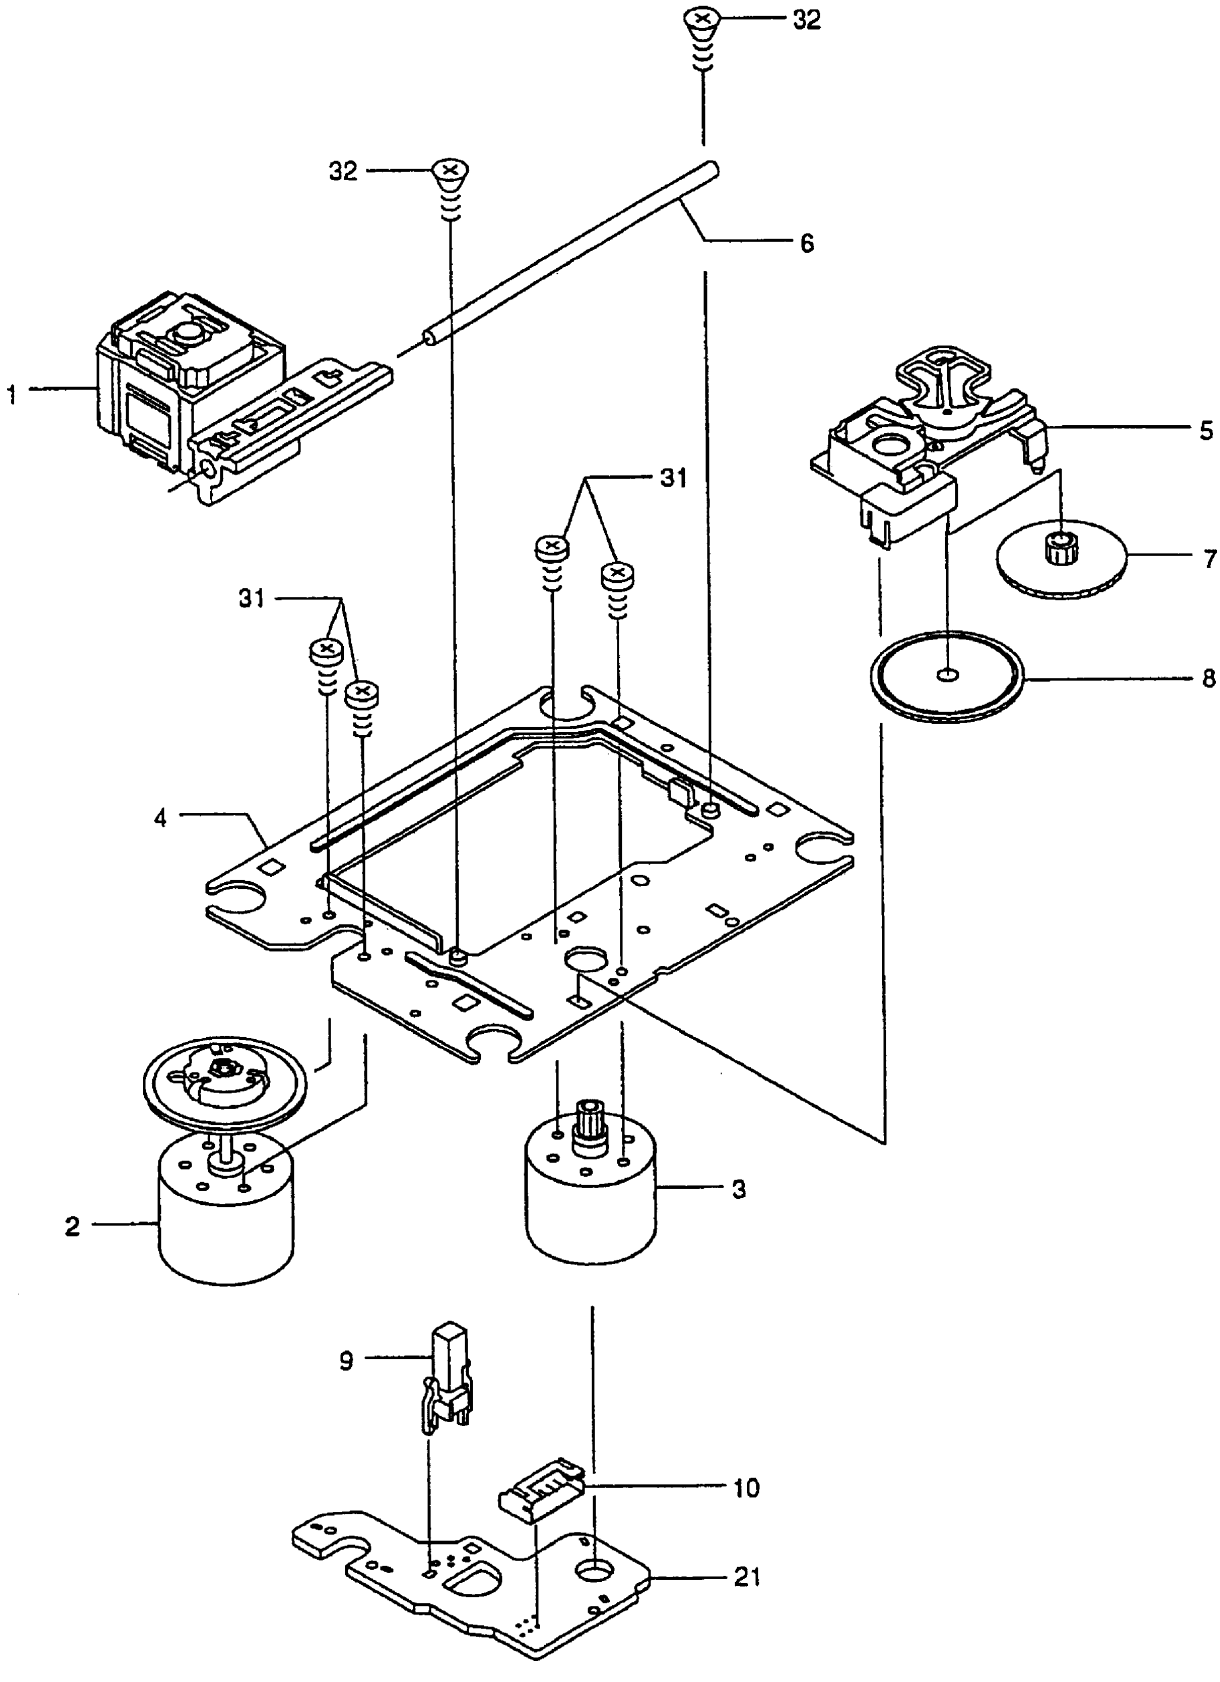

GRUNDIG

Ersatzteilliste
Spare Parts List

NUR FÜR INTERNEN GEBRAUCH
FOR INTERNAL USE ONLY

AUDIO

1 / 2005

RRCD 3410

MATERIAL-NR. / PART NO.: 757123435000
BESTELL-NR. / ORDER NO.: GDP5500 CHROM/CHROME

POS. NR. POS. NO.	ABB. FIG.	MATERIAL-NR. PART NUMBER	ANZ. QTY.	BEZEICHNUNG (D)	DESCRIPTION (GB)
		757123435000		RRCD 3410 CHROM **TAUSCHGERAET**	RRCD 3410 CHROME **EXCHANGE SET**
0001.000		759551089300		DECKEL CASS.	CASS. DOOR
0020.000		759551089200		FEDER CD TUER	CD DOOR SPRING
0021.000		759551101200		DECKEL CD	CD DOOR
0023.000		759550570500		SCHALTER TUER CD DLS02W	SWITCH DOOR CD DLS02W
0043.000		759551088900		LAUFWERK CASS. THL-21VB-1933A	CASS. MECHANISM THL-21VB-1933A
0044.000		759551089800		TASTENSATZ CASS. KPL.	CASSETTE KNOB (SET)
0058.000	⚠	759550615100		LAUFWERK CD DA11-T3CN	CD MECHANISM DA11-T3CN
0078.000		759551089400		TRAGEGRIFF	HANDLE
0084.000		759551089000		TELESKOPANTENNE TA78124	FM ROD ANTENNA TA78124
0086.000		759551089700		TUERE BATTERIEFACH	BATTERY DOOR
0093.000		759551089600		BATTERIEFACHABDECKUNG	BATTERY COVER
0094.000		759551089100		FEDER CASS. TUER	CASS. DOOR SPRING
0100.000	⚠	759525012400		NETZKABEL	POWER CORD
0900.000		720117135800		FERNBEDIENUNG	REMOTE CONTROL
0901.000		759551102000		BATT.FACHDECKEL FB	BATTERY DOOR RC
		720114049500		BEDIENUNGSANLEITUNG D/GB/F/I/P/E/NL/PL/DK/S/FIN	INSTRUCTION MANUAL D/GB/F/I/P/E/NL/PL/DK/S/FIN

Es gelten die Vorschriften und Sicherheitshinweise gemäß dem Service Manual "Sicherheit", Mat.-Nummer 720108000001, sowie zusätzlich die eventuell abweichenden, landesspezifischen Vorschriften!

The regulations and safety instructions shall be valid as provided by the "Safety" Service Manual, part number 720108000001, as well as the respective national deviations.

ÄNDERUNGEN VORBEHALTEN / SUBJECT TO ALTERATION